


TO BE USED BY AUTHORISED PERSONNEL ONLY

CAUTION - STEAM CAN BURN

USE IN A SAFE PLACE

- Well-ventilated area
- Level floor
- Clear of clutter
- No trailing cable
- Away from walkways and children
- Away from smoke detectors

FILL WITH TAP WATER ONLY

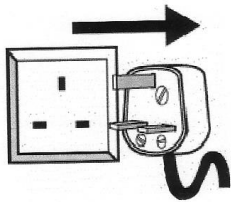

- SWITCH OFF
- DISCONNECT POWER SUPPLY



- USE FUNNEL AND DO NOT OVERFILL
- MOP UP SPILLAGES BEFORE CONNECTING POWER SUPPLY


ENSURE FILLER CAP IS FITTED TO WATER INLET COUPLING WITH CORRESPONDING GRAPHIC BEFORE SWITCHING ON.



DO NOT STEAM CLOTHES ON YOURSELF OR OTHERS



KEEP HOLES IN NOZZLE POINTING UPWARDS

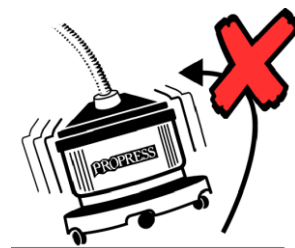

DO NOT TILT OR CARRY MACHINE WHEN IN USE

- DO NOT TWIST OR KINK HOSE
- NEVER LEAVE HOSE ON THE FLOOR
- NEVER LEAVE MACHINE STEAMING UNATTENDED
- ONLY REFILL WHEN WARNING LIGHT INDICATES EMPTY

SWITCH OFF IF STEAM ESCAPES FROM FILLER CAP AND CONSULT INSTRUCTION MANUAL

CUSTOMER SERVICE LINE : 1800 STEAMS (1800 783 267) toll free